




STEP 1 - USING A 4mm HEX DRIVER, REMOVE THE TWO M6X25 FLAT HEAD SCREWS

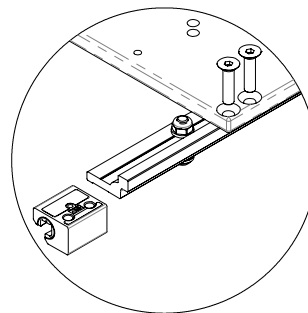


STEP 2 - SLIDE THE CAR OFF THE END OF THE TRACK

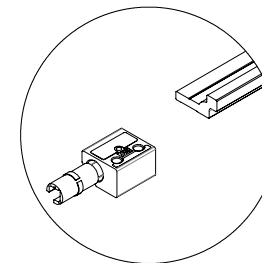

STEP 3 - PINCH THE BUSHING AND REMOVE IT FROM THE CAR

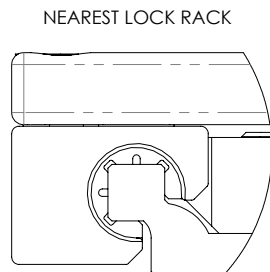

LOCK SIDE BUSHING
(SW-07256)

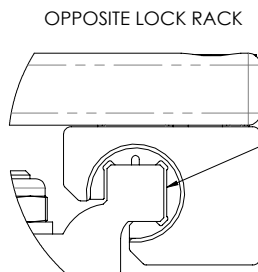

FREE SIDE BUSHING
(SW-05853)

NOTE THE SIDE CLEARANCE
ON THE FREE SIDE BUSHING

STEP 4 - INSTALL THE NEW BUSHING IN THE CAR.
ROLL THE BUSHING INTO PLACE INSIDE THE CAR TO MINIMIZE BENDING
DO NOT OVERBEND THE BUSHING AS THIS WILL CRACK IT

STEP 5 - REINSTALL THE CAR ON THE RAIL
STEP 6 - APPLY LOCTITE 243 OR SIMILAR TO THE M6X25 FLAT HEAD SCREWS
STEP 7 - REINSTALL THE SCREWS AND TORQUE TO 8Nm [6ft-lb]

REPEAT STEPS 1-7 FOR THE OTHER 3 CARS

TOOLS REQUIRED:
4mm HEX DRIVER
TORQUE WRENCH CAPABLE OF 8Nm [6ft_lb]
LOCTITE 243 OR SIMILAR

SHOCKWAVE

FOR MORE INFORMATION
CALL US AT 1-778-426-8545
OR VISIT US ONLINE AT
WWW.SHOCKWAVESEATS.COM

PROPRIETARY AND CONFIDENTIAL

NOTICE: THIS DRAWING MAY REVEAL DESIGNS OR INFORMATION
PROPRIETARY TO PROFESSIONAL COMPONENTS LTD. BY
ACCEPTANCE OF REPRODUCTIONS, RECIPIENTS AGREE
TO PROTECT PROFESSIONAL COMPONENTS LTD. RIGHTS
AND ARE WARNED AGAINST USE OF THE DOCUMENT FOR
ANY PURPOSE OTHER THAN THAT FOR WHICH IT WAS ISSUED.

SW-09120

Seat Slide Bushing Replacement Instructions

WEIGHT: [N/A lbs] N/A kg

SCALE:1:10

SHEET 1 OF 1

REV: 01